




LayRed Scotia

Technical data sheet
English

General information

From floor to finish! Scotia skirtings that are made from the same plank and tiles as your floor. Same colour, same texture and same performance. On top of that, they are easy to install with the Uniclic system to make installing smoother and the finish seamless.

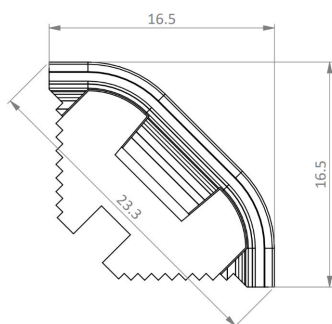

Contents

6 x skirting

Composition

Layred floorplanks and tiles

Colour

Colour

Packaging

Cardboard wrap

-

Order code

Dimensions

MODVFCSCOT(-)

floorlength x 17 x 17 mm

Applicable for:

All Moduleo Layred Vinyl floors.

The floor must be able to expand and contract on all sides. This is why an expansion gap must be provided on all sides of the floor, around pipes, thresholds and under door frames. The exact expansion joint size depends on the floor type. Consult the installation instructions of your Moduleo floor to know the required size of the expansion gap. To finish off this gap, we offer a wide range of skirting and profiles.

Features

Moduleo accessories are specifically developed for Moduleo floors.

Made from your floor

The skirtings have the same colour, same texture and same performance as your floor.

Clickable and compact

With the easy click system and compact length, the skirting ensures perfect alignment and simple installation, even in smaller spaces.

Lifetime warranty


Designed and developed in Belgium, our skirtings come with the same lifetime warranty as our floors.

Sustainable choice

Because our skirtings are recyclable, they are included in our Recover take-back program.

Installation

The scotia can be installed in the following way:

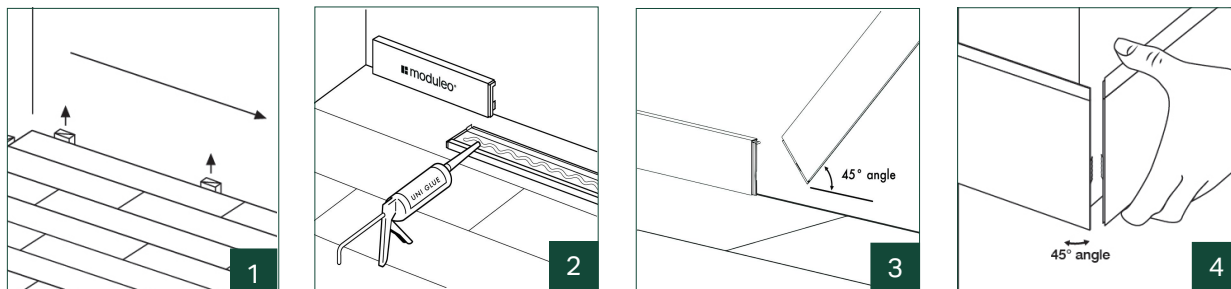

* NOTE: The skirtings in the icons are not the scotia skirtings, however the installation is the same.

- 01 If you start in the left corner, you need to make a miter cut on the left side of the "startscotia", otherwise you are not able to finish properly.
- 02 Apply a cord of Moduleo Uni Glue evenly onto the back of the skirting.
- 03 Position the scotia at a 45° vertical angle to the one already installed. Use the Uniclic system to click the skirtings together securely.
- 04 When you reach a corner, cut the skirting to the correct length and with the correct angle. Use a miter saw to create a perfect fit

Tip: For corners and more difficult parts of the installation, we advise you to do a dry-fit first.

Unilin bv division flooring
Ooigemstraat 3, B-8710 Wielsbeke
T: +32 56 67 52 11
unilin.com
quick-step.com

