







LayRed 4-in-1 Incizo Profile

Technical data sheet
English

General information

From floor to finish! Floormade multifunctional profile to finish your floor and stairs in matching colours. Simply cut the Incizo base profile to the desired shape with the supplied Incizo knife.

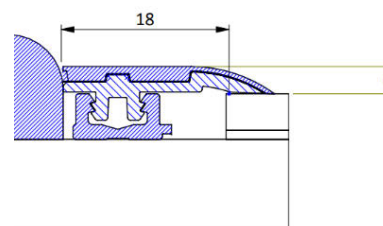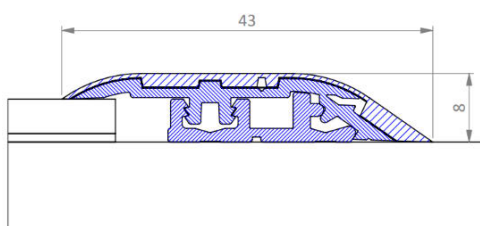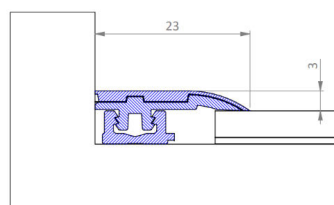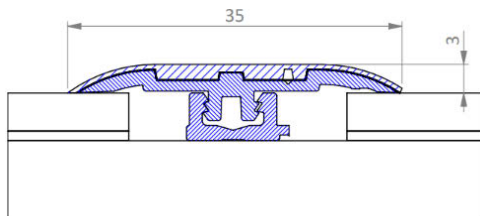

Contents

Composition

Colour

Incizo profile

Layred floorplanks
and tiles

Colour

Multifunctional rail

PVC

Black

Incizo knife

Plastic holder with metal knife inside holder

Order code

Dimensions

MODVFCINCP(-)

floorlength x 43 x 8 mm

Applicable for:

All Moduleo Layred Vinyl floors.


The floor must be able to expand and contract on all sides. This is why an expansion gap must be provided on all sides of the floor, around pipes, thresholds and under door frames. The exact expansion joint size depends on the floor type. Consult the installation instructions of your Moduleo floor to know the required size of the expansion gap. To finish off this gap, we offer a wide range of skirting and profiles.

Applications

With the 4 in 1 profile, you can finish your floor in every situation.

01 Expansion profile

Connect two floors of the same height: in doorways, L-shaped rooms, or rooms where the floor length or width is bigger than 12m.

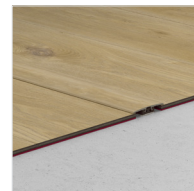

02 Adapter profile

Connect two floors of different heights. Make the transition from your vinyl floor to a floor covering at lower height, like tiles.



03 End profile

Finish your floor along walls, windows, sliding doors, a slightly higher doorstep or tile floor.



04 Transition profile

Create a nice transition between your vinyl floor and other flooring types, like a fixed carpet.



Features

Moduleo accessories are specifically developed for Moduleo floors.

Made from your floor

The profiles have the same colour, same texture and same performance as your floor.

Compact

The compact length ensures simple installation, even in smaller spaces.

Lifetime warranty

Designed and developed in Belgium, our profiles come with the same life time warranty as our floors


Easy to install

Easy installation with the included rail, to be glued with the Moduleo Adhesive.

Complete package

The rail and incizo knife are supplied together with the Incizo profile.

Preparation

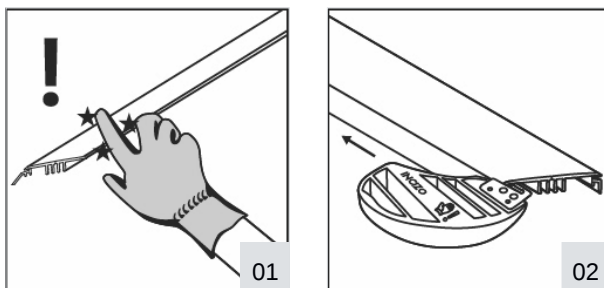


- 01 Always wear gloves - the edge of the profile and the blade are sharp. Read the instructions carefully before use.
- 02 The Incizo slit can be used very simply to cut the profile to the desired profile shape. When cutting the profile, always lay it horizontally on a stable surface.

Installation

Expansion profile


An expansion profile connects two floors of the same height.

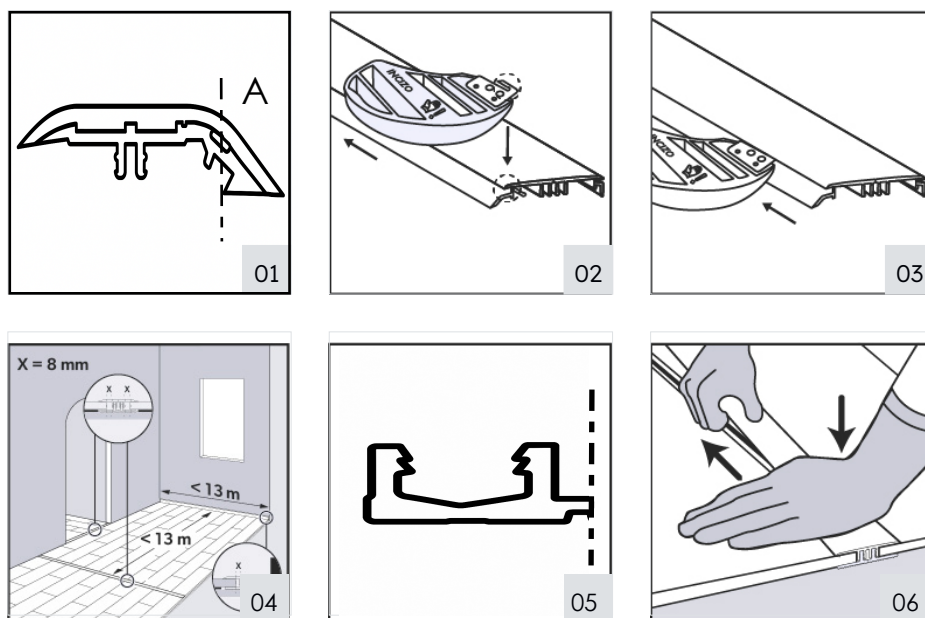

- 01 First saw the Incizo profile to the correct length. Then use the supplied Incizo knife to cut away piece A to obtain an expansion profile.
Tip: for easy cutting, cut both lengths first before removing the piece A.
- 02 Place the splitter so that the blade fits into the narrow slit in the profile.
- 03 Gently pull the splitter backwards, so you cut the profile.
Avoid sliding in the top part. After cutting, remove the cut-offs.
- 04 While installing the floor, be sure to allow sufficient space between the two surfaces that will be joined with the profile.
Mark the ground to indicate how far the edge of the floor will extend.
Cut the plastic rail to the correct length and place it in the middle of the open space between the two floor surfaces. Ensure that there is a sufficient expansion gap between the floor and the raised legs of the rail, in which the profile will be clamped.
- 05 The rail can be installed with the Moduleo adhesive to any type of surface.
- 06 Gently press in the top part of the profile from one side to the other, so the edges of the top-profile nicely touches the floor.

Adapter profile


An adapter profile connects two floors of different heights.

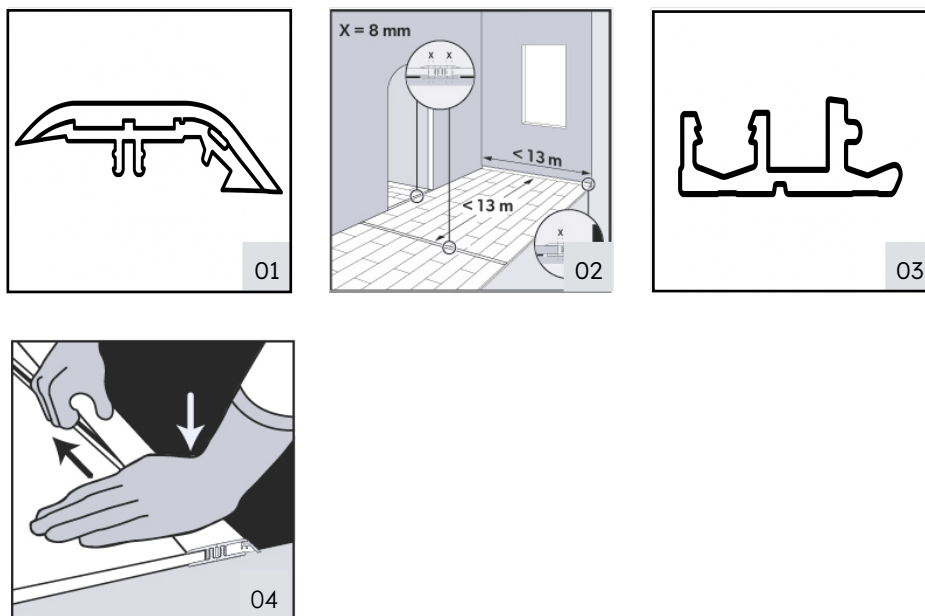

- 01 First saw the Incizo profile to the correct length.
- 02 While installing the floor, assure that there is sufficient space to install the profile. Mark the ground to indicate how far the edge of the floor will extend. Cut the plastic rail to the correct length and place it in the middle of the open space between the two floor surfaces. Ensure that there is a sufficient expansion gap between the floor and the raised legs of the rail, in which the profile will be clamped.
- 03 The rail can be installed with the Moduleo adhesive to any type of surface.
- 04 Gently press in the top part of the profile from one side to the other, so the edges of the top-profile nicely touches the floor.

End profile


An end profile is used to finish your floor along walls or windows.

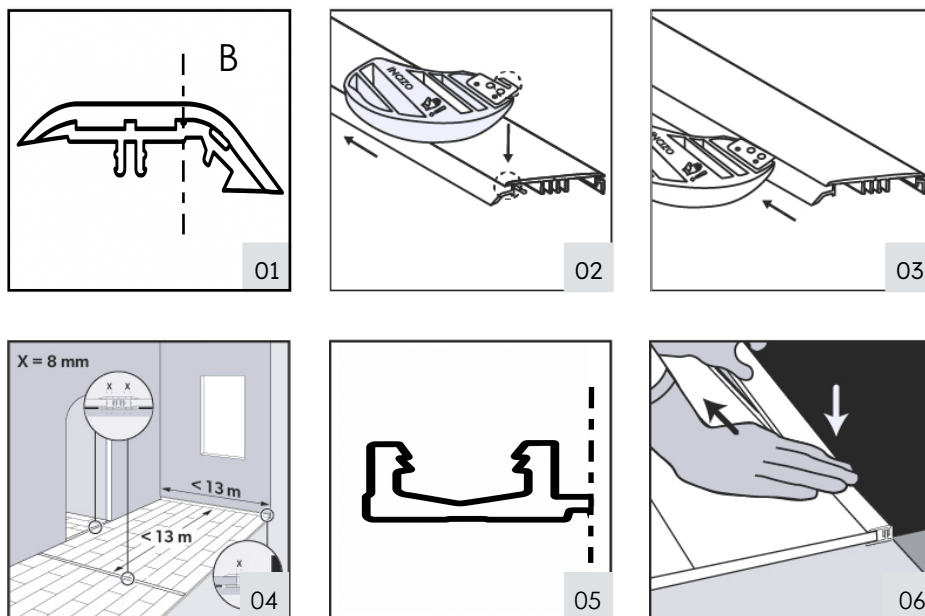

- 01 First saw the Incizo profile to the correct length. Then use the supplied Incizo knife to cutaway piece B to obtain an end profile.
- 02 Place the slitter so that the blade fits into the narrow slit in the profile.
- 03 Gently pull the slitter backwards, so you cut the profile. Avoid sliding in the top part. After cutting, remove the cut-offs.
- 04 While installing the floor, assure that there is sufficient space to install the profile. Mark the ground to indicate how far the edge of the floor will extend. Cut the plastic rail to the correct length and place it in the middle of the open space between the two floor surfaces. Ensure that there is a sufficient expansion gap between the floor and the raised legs of the rail, in which the profile will be clamped.
- 05 The rail can be installed with the Moduleo adhesive to any type of surface.
- 06 Gently press in the top part of the profile from one side to the other, so the edges of the top-profile nicely touches the floor.

Transition profile

A transition profile is used to create a nice transition between your vinyl floor and other flooring types like a fixed carpet.

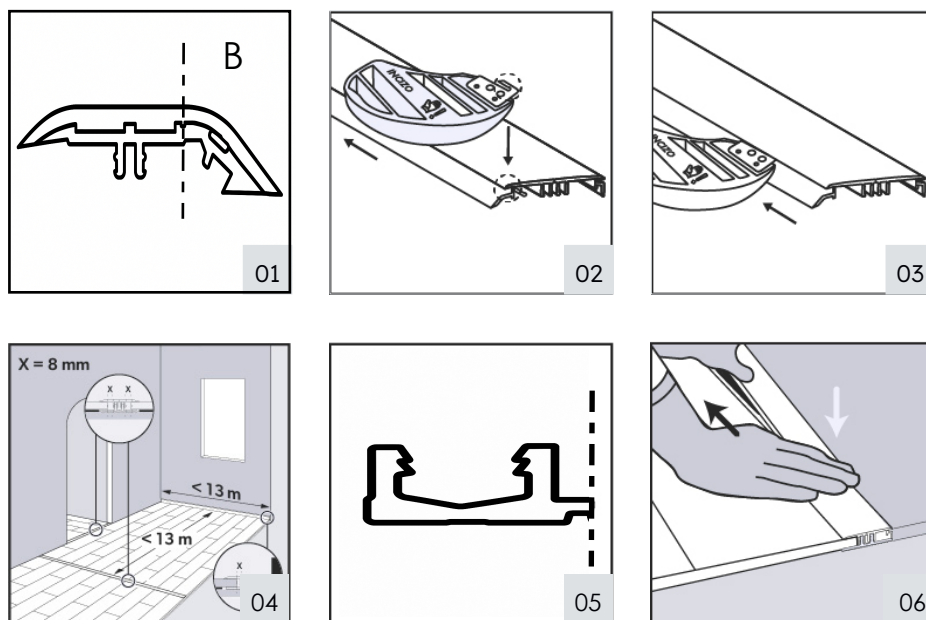

- 01 First saw the Incizo profile to the correct length. Then use the supplied Incizo knife to cut away piece B to obtain an transition profile.
- 02 Place the slitler so that the blade fits into the narrow slit in the profile.
- 03 Gently pull the slitler backwards, so you cut the profile. Avoid sliding in the top part. After cutting, remove the cut-offs.
- 04 While installing the floor, assure that there is sufficient space to install the profile. Mark the ground to indicate how far the edge of the floor will extend. Cut the plastic rail to the correct length and place it in the middle of the open space between the two floor surfaces. Ensure that there is a sufficient expansion gap between the floor and the raised legs of the rail, in which the profile will be clamped.
- 05 The rail can be installed with the Moduleo adhesive to any type of surface.
- 06 Gently press in the top part of the profile from one side to the other, so the edges of the top-profile nicely touches the floor.